

LIFT MAINTENANCE

OIL LEVEL:

IMPORTANT: When adding or replacing oil, always use a good grade of hydraulic jack oil, transmission oil or turbine oil and always avoid mixing different types of oil.

Never use brake fluid, alcohol, glycerine, detergent motor oil or dirty oil of any kind.

Improper oil usage will cause serious internal damage to jack.

ADDING OIL: With trolley positioned so that fill plug is on top and lifting arm is in the down position, remove oil fill plug. Add oil if level is more than 1/2" below hole and replace cover plate.

REPLACING OIL: Oil should be replaced at least once every year. To drain oil, remove oil filler plug and release valve. Be VERY CAREFUL to not allow dirt or any foreign matter into the system.

LUBRICATION: Oil all rotating parts once a year.

RUST PREVENTION: Clean and wipe with an oily cloth, the piston ram and pump piston every 3 months or when signs of rust or corrosion appear. When not in use, always leave the lift arm in the completely down position.

One Year Guarantee

Every JARVIS product is inspected before leaving the factory. This product is warranted to be free of defects in material and workmanship. JARVIS will replace free of charge, with the same or like item of equal value any item found to have defects in materials or workmanship during the first 1 year of customer ownership with proof of purchase. Proof of purchase must be either original or clear copy of your receipt. Call 1-800-548-4239 for a return authorization number.

This warranty gives you specific legal rights and you may also have other rights which may vary from state to state. Some parts made in China.

TROUBLE SHOOTING CHECK LIST

TROUBLE	CAUSE	REMEDY
LIFT will not lower completely	1. Air in hydraulic system 2. Release valve stuck	1. Purge air from hydraulic system. 2. Transfer weight load and clean valve
LIFT will not hold weight	1. Release valve in open position	1. Close release valve tightly
LIFT will not lift to full height	1. Oil level low 2. Air in hydraulic system	1. Fill to recommended level 2. Purge air from hydraulic system
Weak lifting	1. Air in hydraulic system 2. Dirty Oil 3. Release valve not completely closed	1. Purge air from hydraulic system 2. Change oil. Use SAE 5W 3. Close release valve tightly
LIFT will not lift load	1. Excessive weight 2. Release valve in open position 3. Oil level low	1. Decrease weight or change to higher capacity jack 2. Turn valve clockwise and tighten 3. Fill to recommended level



1-800-548-4239

A division of Jarvis Industries, Inc.

COMMERCIAL COMPLIFT

INSTRUCTION MANUAL

Owner and/or Operator Responsibility

The owner and/or operator shall study the product instructions and retain them for future reference.

Operation

The owner and/or operator shall have an understanding of the product and safety operating instructions before operating the LIFT. Safety information shall be emphasized and understood. If the operator is not fluent in English, the product and safety instructions shall be read to and discussed with the operator in the operator's native language by the purchaser/owner or his designee, making sure that the operator comprehends their contents.

Maintenance

The LIFT shall be maintained in the accordance with the product instructions.

Inspection

- Visual inspection shall be made before each use of the LIFT by checking for abnormal conditions, such as cracked welds, leaks, and damaged, loose, or missing parts.
- Other inspections shall be made per product operating instructions.
- Each LIFT shall be inspected immediately if the lift is believed to have been subjected to an abnormal load or shock. It is recommended that this inspection be made by a manufacturer's or supplier's authorized repair facility.
- Owners and/or operators should be aware that repair of this equipment may require specialized knowledge and facilities. It is recommended that an annual inspection of the LIFT be made by a manufacturer's or supplier's authorized repair facility and that any defective parts, decals, or safety labels or signs be replaced with manufacturer's or supplier's specified parts.

Damaged Equipment

Any LIFT that appears to be damaged in any way, is found to be worn or operates abnormally **SHALL BE REMOVED FROM SERVICE UNTIL REPAIRED**. It is recommended that necessary repairs be made by a manufacturer's or supplier's authorized repair facility if repairs are permitted by the manufacturer or supplier.

Alterations

Because of potential hazards associated with this type of equipment, no alterations shall be made to the products.

Attachments and Adaptors

Only attachments and/or adaptors supplied by the manufacturer shall be used.



- Study, understand, and follow all instructions before operating this device.
- This is a lifting device only.
- Do not exceed rated capacity.
- Use only on hard level surface.
- Failure to heed these markings may result in personal injury and/or property damage.
- No alterations to the LIFT shall be made to this product.

2.

BEFORE USE


During shipment or handling, air in LIFT can become trapped in the hydraulic system causing jack to malfunction.

1. Position trolley so that fill plug is on top.
2. Turn release valve counter-clockwise with handle no more than two full turns.
3. Remove oil fill plug.
4. Pump jack handle quickly in several full strokes
5. Repeat above steps as needed. **Remember to replace oil fill plug.**

INSTRUCTIONS FOR USE

It is recommended that 2 or more persons assist in set-up.

1. Spread legs of both leg assemblies and secure with bent pulls.
2. Install telescoping height supports and secure with tethered hitch pin. For maximum lift, adjust height support so that top of supports are 1 to 2 inches below overhead obstructions or until telescoping supports are at their maximum height.
3. Place leg assembly on hard level surface. Locate leg assembly so that maximum space is provided on one side to allow load to be pulled out. Install beam on both supports. Beam must be fully seated in beam saddle.
4. Adjust supports so that beam is as level as possible.
5. Close release valve tightly by turning handle clockwise. Use end of handle to turn valve.
6. Secure load to lifting hook using chain.
7. Pump the handle until load is lifted.
8. Slowly roll out load.
9. To lower the load. Use handle to turn the release valve counter clockwise. Very slowly, until load is on a secure surface.

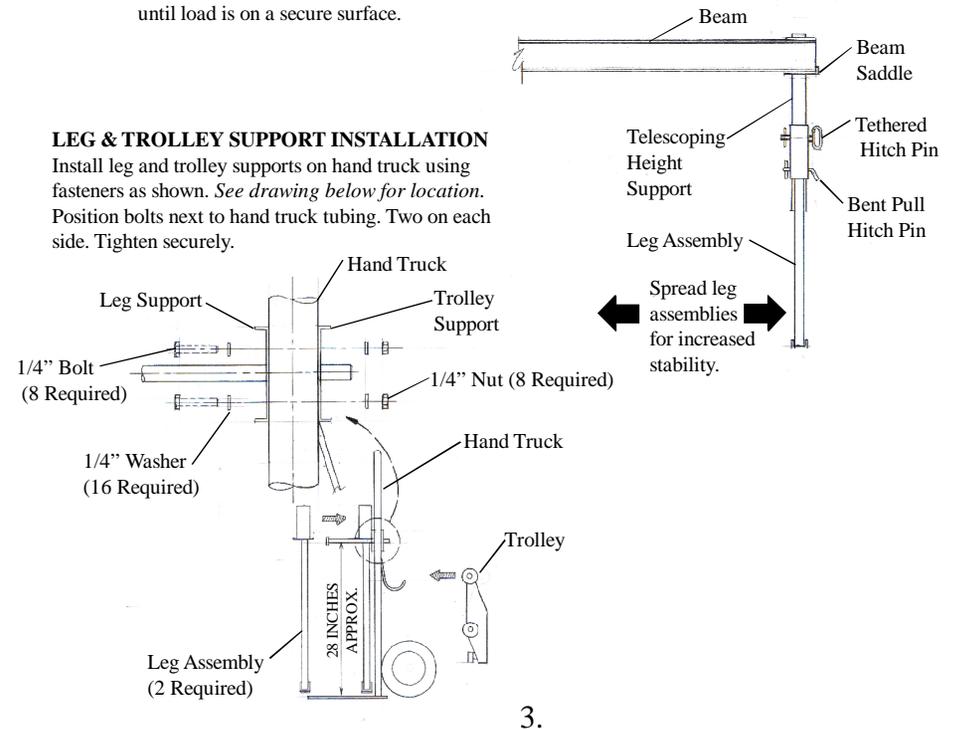

3.